


## Seful functions W

#### No PC Operation

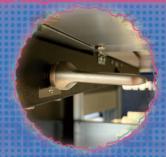

No PC is required to send the data to the plotter, the cut data is stored on a USB memory stick and can be selected from the control panel.

# Eack Ceasing

Clear folds can be made without damaging the printed surface. The number of creasing lines can be increased from the control panel.

#### Copy Function



You can cut the same data as many times as you like by specifying the number of sheets in the control panel. There is also a dedicated button for this purpose.

#### Barcode Cut



The plotter uses the barcode information to find the correct cut data from the USB memory stick and cut it. This eliminates human error.

## Panel size


### FCX2000-60

 
#### FCX2000-120

Vacuum suction Electristatic FCX2000-180





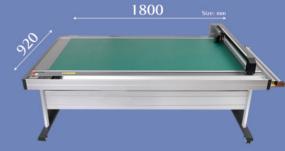



- Before using it, please read the user manual and then please use it properly in accordance with the description.
- To avoid an occurrence of malfunction or an electric shock by leakage, please ensure ground connection and use it in specified power source

#### GRAPHTEC

Graphtec Europe B.V.
Kruisweg 801-B 2132NG Hoofddorp, The Netherlands
Tel: +31-(0)23-568-3800







